



# McDonald's Antunes Bun Toaster Maintenance & Cleaning Instructions

**Be sure the toaster is cool & unplugged before cleaning.**

<b>Frequency</b>	<b>Maintenance / Cleaning Task</b>	<b>Date Last Done</b>
<b>Daily</b>	<p><u>Clean the following with a no-scratch pad/ sanitized cloth &amp; All Purpose Cleaner:</u></p> <ul style="list-style-type: none"> <li>▪ Remove &amp; clean Bun feeder &amp; Bun chute</li> <li>▪ Remove Teflon. Clean both sides with the aid of a no-scratch pad.</li> <li>▪ Open/remove front &amp; rear covers to clean wrap belts &amp; Teflon Dampers</li> <li>▪ Close/replace front &amp; rear covers</li> <li>▪ Remove Bun Buffer &amp; clean entire BBLZ &amp; heated BLZ</li> <li>▪ Securely reinstall BBLZ &amp; Bun chute</li> <li>▪ Wipe down remaining toaster surface &amp; turn on toaster</li> <li>▪ Rotate/reinstall Teflon sheet, replace bun feeder &amp; set compression to D&amp;5</li> </ul>	<i>Routine</i>
<b>Weekly</b>	<ul style="list-style-type: none"> <li>▪ Remove Front &amp; Rear Belt Wraps</li> <li>▪ Go to the back sink, using a NO SCRATCH pad, All Purpose Cleaner and Sanitizer Solution, Scrub Both Sides of Belts and air dry</li> <li>▪ Burnt Particles/dust inside toaster are removed by turning compression dials several times. If available, blow out dust with compressed air.</li> <li>▪ Clean the Chain Links with a Sanitized, Clean Towel</li> <li>▪ Reinstall air dried belt wraps verifying proper vertical alignment &amp; Belt flaps point downward.</li> <li>▪ Rotate Toasters (identify toasters individually as A &amp; B or #1 &amp; #2)</li> </ul>	
<b>Monthly</b>	<ul style="list-style-type: none"> <li>▪ Change Teflon Sheet a minimum of once per month. (Faded, torn or rough surfaced sheets must be <u>changed sooner</u> without delay)</li> <li>▪ Check inner door nuts are securely tightened &amp; no spacers are missing.</li> </ul>	
<b>3 Months</b>	<ul style="list-style-type: none"> <li>▪ Change Front &amp; Rear Wrap Belts. (worn or damaged belt wrap surfaces require belts to be changed without delay &amp; always in pairs)</li> </ul>	
<b>Toaster Checks</b>	<ul style="list-style-type: none"> <li>▪ Check front chain tension using quarter for approximate distance</li> <li>▪ Check rear chain tension using a dime for approximate distance. Check roller tension to insure equal to a nickel</li> <li>▪ Replace Teflon dampers &amp; springs as needed.</li> <li>▪ Minimum annual lubrication of motor chain &amp; tightening of Yellow rods</li> </ul> 	