

625-MFY Rapid Steamer Water Tube Replacement



PRINCE CASTLE INC. WORLDWIDE

Stores that have harder water in their areas, may experience scale build-up in their water tubes, thus clogging the tube and preventing water from being dispensed into the steaming chamber. If the tube needs to be replaced, this sheet will illustrate how to replace the water tube.

- ① First, turn off and unplug steamer. Let steamer cool down. To remove the cover plate that shields the water tube, use a Philips head screw driver to remove the two screws. Next, take off the back plate to access the water tube.



- ④ To insert the new tube, first insert the top end through the hole that leads to the platen.



- ② To pull the tube out from the water valve, push in the grey disk on the water valve and then slowly slide the tube from the water valve.



- ⑤ Next, push the other end of the tube into the water valve. Make sure that you feel it click into place. Otherwise, water could leak at this point.



- ③ Using pliers, gently pull the tube out from the platen. You may need to softly rock it back and forth to prevent pulling out the insulating sleeve that separates the tube from the platen.



- ⑥ Finally, re-install the cover plate. Turn on unit and begin a water cycle to check for leaking at the water valve. If leaking occurs, turn off unit and repeat step 5.



PRINCE CASTLE INC. WORLDWIDE

355 East Kehoe Blvd. 1 Carol Stream, IL 60188
Tel: (630) 462-8800 1 Fax: (630) 462-1460
Toll Free: 1-800-PCASTLE
www.princecastle.com