


Why	To reduce the chance of buns sticking to the platens and to maintain the platen coating	
Time required	15 minutes to prepare	15 minutes to complete
Time of day	At close	For 24-hour restaurants: during low-volume periods

Hazard icons  Chemicals  Electricity  Hot Liquids/Steam  Hot Surfaces  Manual Handling
 Moving Parts  Sharp Objects/Surfaces

Tools and supplies

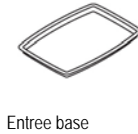

Procedure

- 1 Prepare toaster for cleaning. Set the toaster to “CLEAN” mode. When the toaster reads, “CLEAN READY” then unplug the power cord.



Electricity


Unplug the toaster from the power outlet before cleaning.



- 2 Ensure that the gates/false floor are open to ensure that you do not damage the gates while cleaning.



- 3 Prepare URT cleaning tool. Put on neoprene gloves. Place a no-scratch pad onto the URT cleaning tool. Open a packet of McD Hi-Temp Grill Cleaner and apply to non-scratch pad.

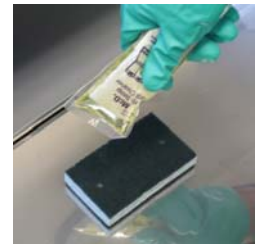

continued ►

Clean toaster (continued)

4 Apply McD Hi-Temp Grill Cleaner to platen.

Spread a light coating of grill cleaner onto the platen with the URT cleaning tool. Apply grill cleaner to each section of the platen by lightly scrubbing in an up and down manner.



If you are using Teflon sheets, skip this step.

Equipment Alert

Do not scrub the platen with the URT cleaning tool.



Hot Surfaces

Put on neoprene gloves before you begin.

5 Apply McD Hi-Temp Grill Cleaner to compression plate.

Spread a light coating of grill cleaner onto the compression plate with the URT cleaning tool. Apply grill cleaner to each section of the plate.



Equipment Alert

Do not scrub the compression plate with the URT cleaning tool.

6 Prepare URT cleaning tool.

Allow the McD Hi-Temp Grill Cleaner to work for 1 to 2 minutes. While you wait, remove the no-scratch pad from the URT cleaning tool. Fold a clean, sanitized towel in half. Fold the towel in half again. Attach the folded towel to the URT cleaning tool.



Chemicals

Sanitizer solution

7 Wipe platen.

Wipe each platen with the URT cleaning tool and towel thoroughly. Remove all grill cleaner residue.



Equipment Alert

Do not use any abrasive cleaners, pads, or tools on the platens.

8 Wipe compression plate.

Wipe each plate with the URT cleaning tool and towel thoroughly. Remove all grill cleaner residue.



Equipment Alert

Do not use any abrasive cleaners, pads, or tools on the compression plates.

9 Remove Wire Rack

To access the chutes, remove the wire rack.



continued ►

10 Clean outside of toaster.

Spray a clean, sanitized towel with McD HDD. Wipe down the outside of the entire toaster, including the BBLZ and gates. Wipe down the entire toaster again with a fresh clean, sanitized towel. Discard the towels into the soiled towel bucket.



Chemicals

McD HDD