



Installing Release Sheets on Prince Castle Universal Rapid Toaster


Installing the sheet for the main platen...

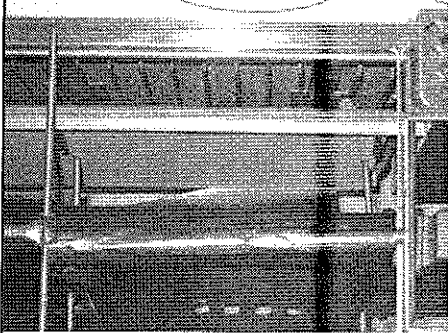

Slip the sheet over the platen so that the sheet falls on both sides of the platen. The sheet's notches go over the lane dividers.

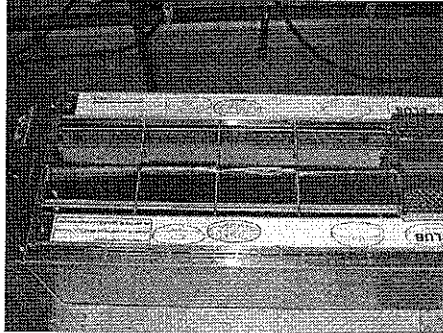


The sheet will cover the entire main platen's four slots. The sheet can be turned inside-out to double the sheet's usage.

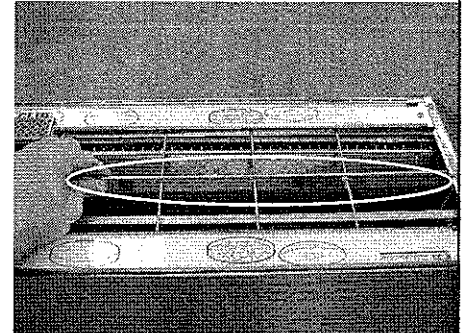


Place the clamp atop the bun splitter to secure the release sheet.

Installing the sheet for the Club's middle platen

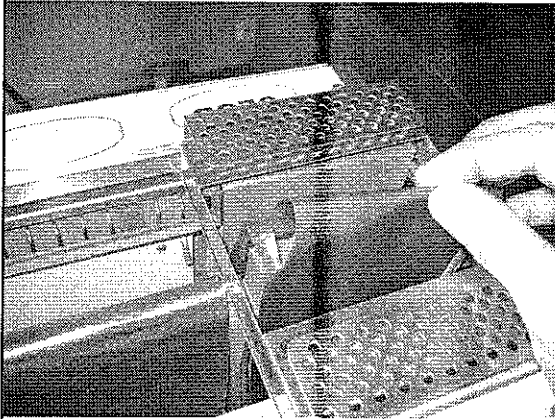


Slip the sheet over the platen so that the sheet falls on both sides of the platen.

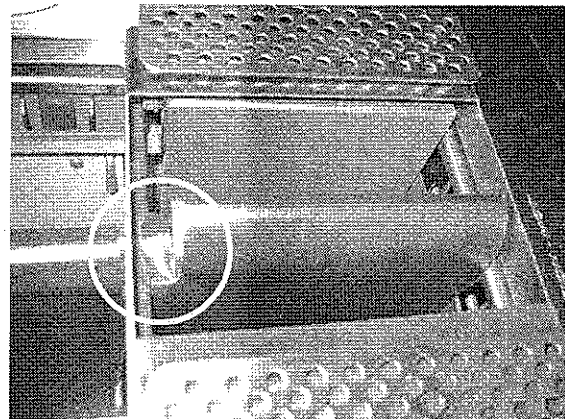


Ensure that the tab slides to the side of the platen nearest to the main platen.


Installing the sheet for the Club's outside platen

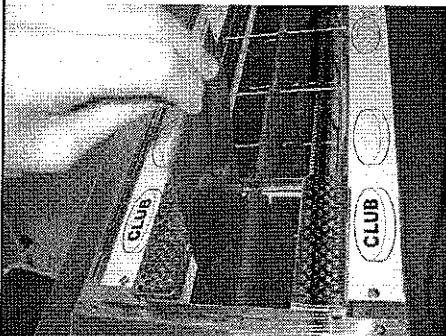

Insert the sheet into the chamber.

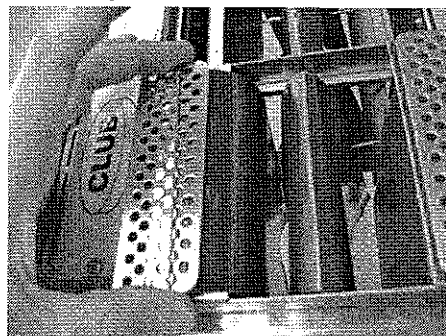

Slide the club guard through the sheet's pin.

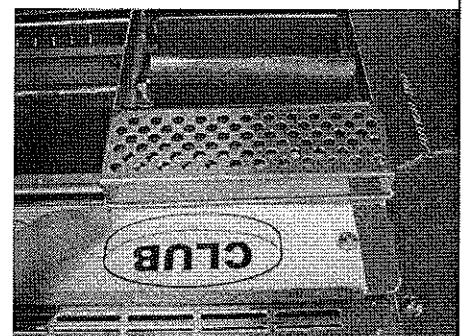

Slide the pin behind the club guard.

Programming New Settings

To attain acceptable bun temperatures and caramelization, we must change the bun product settings.

To increase the platen temperature limit from 500°F to 550°F:

1. Press the **PRODUCT/OFF** button until the display reads, "OFF"
2. Press and hold simultaneously the **Lighter and Darker Arrow** buttons until the display reads, "PLATEN TEMP 500"
3. Press the **Up Arrow** button until the display reads, "550"
4. Press the **I** button to save

To change settings:

1. Press and hold the **Prince Castle logo** button for six seconds until you reach the Programming Mode
2. Press the **Down Arrow** button until the display reads, "BUNS"
3. Press the **I** button
4. Press the **Down Arrow** button until the display reads, "PLATEN TEMP"
5. Press the **I** button
6. Press the **Up Arrow** button until the display reads, "550"
7. Press the **I** button to save the setting
8. Press the **Down Arrow** button until the display reads, "CLUB TEMP"
9. Press the **I** button
10. Press the **Up Arrow** button until the display reads, "530"
11. Press the **I** button to save the setting
12. Press the **Down Arrow** button until the display reads, "COMPRESSION"
13. Press the **I** button
14. Press the **Up Arrow** button until the display reads, "30"
15. Press the **I** button to save the setting
16. Press the **Down Arrow** button until the display reads, "TIME"
17. Press the **I** button
18. Press the **Up Arrow** button once until the display reads, "17"
19. Press the **I** button to save the setting
20. Press the **Prince Castle logo** button twice to exit the Programming Mode

	Old Settings (without sheets)	New Settings (with sheets)
Platen Temp	500	550
Club Temp	480	530
Compression	25	30
Time	16	17

Platen Temp
Club Temp
Compression
Time

Cleaning Release Sheets (Daily)

Option One

Clean one chamber at a time during one of your lowest volume periods.

1. Put on heat resistant gloves
2. Remove each release sheet from the toaster
3. Lay release sheet on a clean, flat, dry surface. Spray MCD All-Purpose Super Concentrate (APSC) (HCS) on a clean, dry towel. Wipe the towel firmly across the sheet length-wise over its entire surface. Immediately, repeat this procedure with a clean, dry towel dampened with KAYQUAT Sanitizer Solution (HCS) and allow release sheet to air dry. Turn the release sheet and repeat this cleaning procedure.
4. To clean compression plates, perform tasks 3 and 4 under Option Two.

Option Two

Clean one chamber at a time during one of your lowest volume periods.

1. Put on heat resistant gloves
2. Spray MCD All-Purpose Super Concentrate (APSC) (HCS) on a clean, dry towel and then wrap the towel around the URT Cleaning Tool.
3. With the sheets in the toaster, wipe the sheets and the compression plates with the URT Cleaning Tool and APSC-soaked towel.
4. Replace dirty towel with a clean towel dampened with KAYQUAT Sanitizer Solution (HCS) and wipe sheets and compression plates.

Note: Replace the release sheet if it's torn, wrinkled or dull and discolored.